

# Installation Instructions

## Core 4" Square Cylinder - Junction Box


for CR4CD-SF-JB and CR4CWW-SF-JB

### Cautions and Warnings

1. This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power must be OFF when connecting the fixture. "hot plugging" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER.
4. LEDs should be protected from dust and debris during during installation and maintenance.
5. Polarity is important. Black must be connected to black and red connected to red.
6. Not designed for use as temporary lighting.


### Step B

Remove LED/driver assembly, pulling assembly from housing until ball plungers are clear of housing. Disconnect line voltage connector from LED/driver assembly and set lead aside.

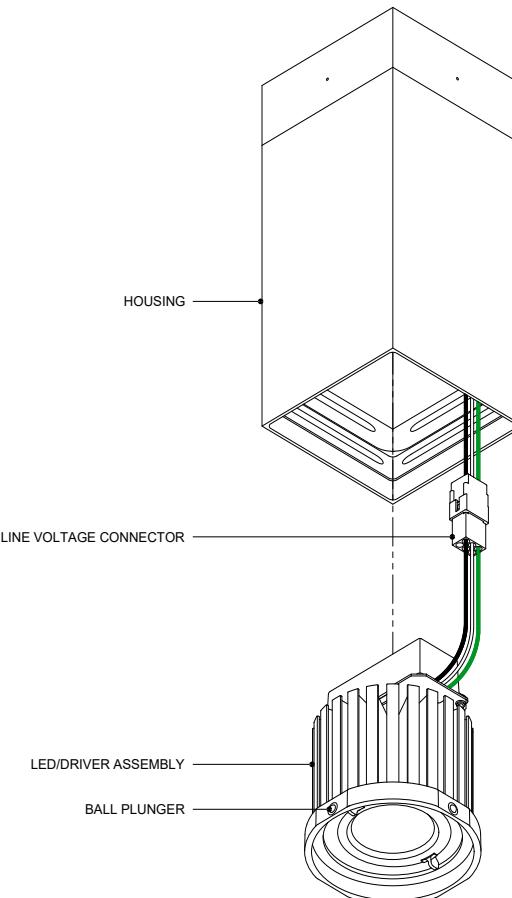

### Step A

Remove trim from housing, pulling trim until ball plungers are clear of housing.

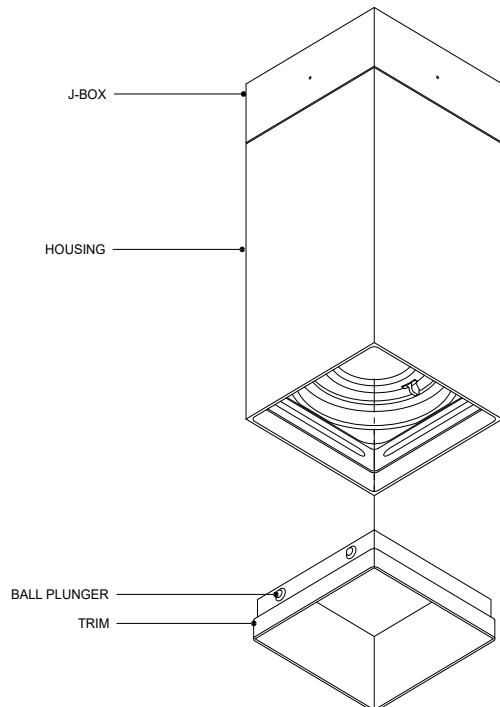

\*\* LED'S SHOULD BE PROTECTED FROM DUST AND DEBRIS DURING INSTALLATION AND MAINTENANCE

[Click here to read full Care and Maintenance](#)

# Installation Instructions


## Core 4" Square Cylinder - Junction Box

for CR4CD-SF-JB and CR4CWW-SF-JB



### Step C

Reinstall LED/driver assembly. Connect line voltage connector. Reconnect any safety cables. Push assembly into housing until ball plungers engage housing securely.

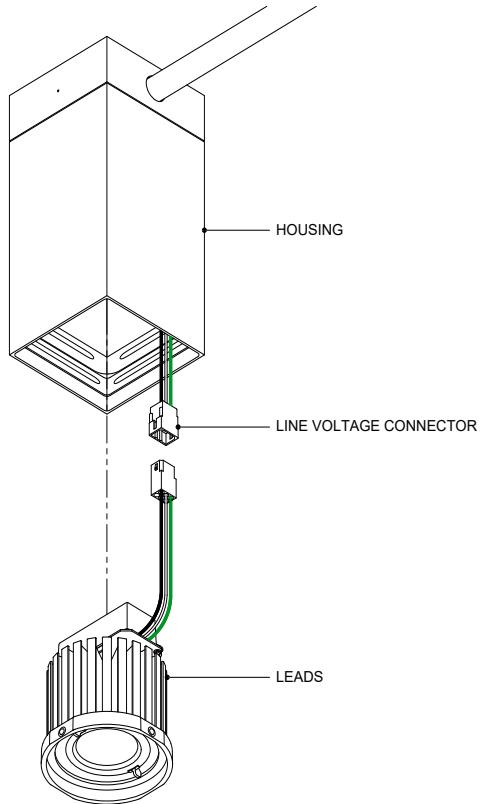

### Step D

Push trim into housing until ball plungers engage housing securely.

