# Tenor 5 Flangeless Continuous Installation Instructions




for JZT5-4C and JZT5-6C Flangeless

#### Cautions and Warnings

- This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
- Power must be OFF when connecting the fixture. "hot plugging" devices will damage the LED source.
- **3.** The light engine is low voltage and is factory wired to the driver DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER.
- Polarity is important. Black must be connected to black and red connected to red.


#### Step A

1. Refer to cutsheets for ceiling cutout dimensions based upon overall fixture length. Install blocking, tied to framing based upon ceiling cutout dimensions. Cut rectangular ceiling cut-out and install sheetrock so that ceiling cut-outs and blocking align. (For housings that are provided in multiple sections and require joining in the field, one of the ends should be left open to allow room for joining the fixture in the ceiling. This remaining ceiling section should installed after housing is in place.)

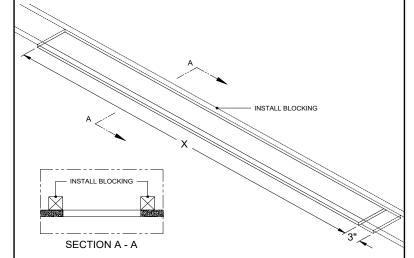


#### Step B

 Remove yoke mounting/driver plates from housings by removing (2) screws and pulling until springs retaining plate in housing are clear of housing to pull power into fixture compartment.

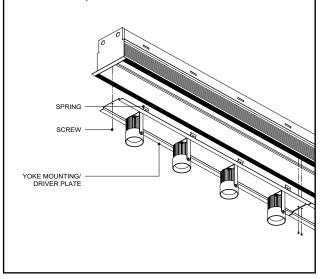

#### Step C


 Prior to installing the housing in ceiling. Connect power to housing at knock-out, leaving 6" leads in place for connections to yoke mounting plate and drivers.

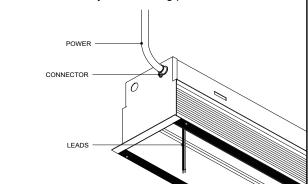



## Tenor 5 Flangeless Continuous Installation Instructions



for JZT5-4C and JZT5-6C Flangeless

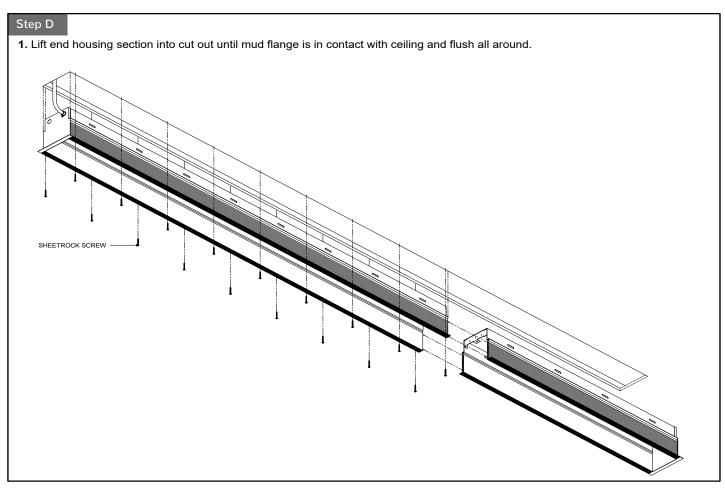

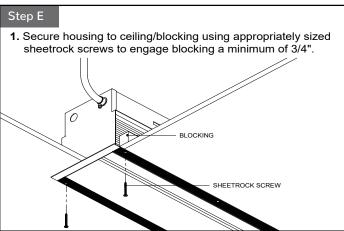


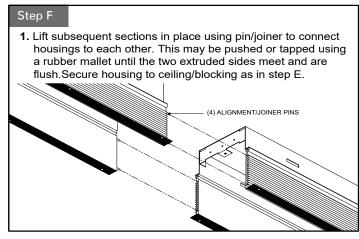

### Tenor 5 Flangeless Continuous Installation Instructions



for JZT5-4C and JZT5-6C Flangeless

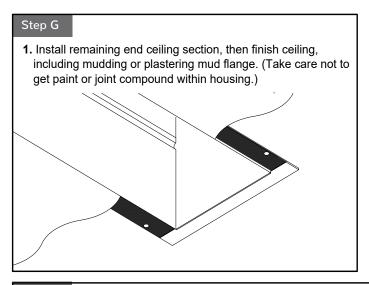

### Step H

1. Prior to reinstalling the yoke mounting/driver plates into housing, make electrical connection between housing and yoke mounting/driver plate, then secure plate to housing using supplied fasteners. Install subsequent plates, making electrical connections between plates and securing plates to housing until all plates are electrified and secuted within housing. Turn on power to check electrical connection.

