Installation Instructions Slice 2" Continous Linear Multicell Downlight (54mm)

specialty
lighting industries


for SI 2DC-MCRC-AF

Cautions and Warnings

- This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
- Power must be OFF when connecting the fixture. "hot plugging" the light engine and driver will damage the LED source.
- The light engine is low voltage and is factory wired to the driver DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER.
- LEDs should be protected from dust and debris during during installation and maintenance.
- Polarity is important. Black must be connected to black and red connected to red.
- 6. Not designed for use as temporary lighting.




Remove LED/driver assembly from housing by pulling LED/driver until springs retaining assembly in housing are clear of housing to gain access to adjust deployable mounting bracket.

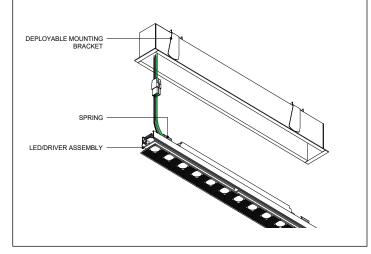


Step A

Refer to cutsheets for ceiling cutout dimensions based upon overall fixture length. Cut rectangular ceiling cut-out. Ceiling should be painted prior to installing fixture to prevent paint on overlapping flange.

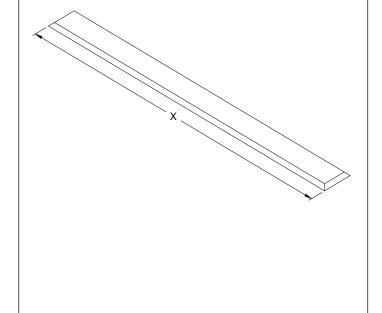

Step C

Prior to installing the housing in ceiling. Connect power to housing at feed location on top of housing, leaving 6" leads in place for connections to LED assembly and drivers.

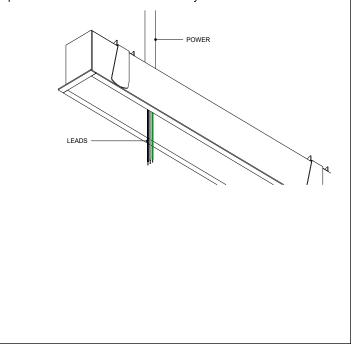


** LED'S SHOULD BE PROTECTED FROM DUST AND DEBRIS DURING INSTALLATION AND MAINTENANCE

Click here to read full Care and Maintenance



for SL2DC-MCRC-AF

Lift housing into cut out until flange is in contact with ceiling and flush all around.

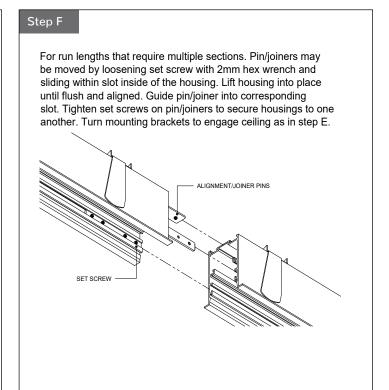

Turn mounting mounting bracket adjustment screw until there is signifigant resistance. The mounting bracket should engage the celling. Repeat this for each mounting bracket. MOUNTING BRACKET

