


Cautions and Warnings

1. This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power must be OFF when connecting the fixture. "hot plugging" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER.
4. LEDs should be protected from dust and debris during installation and maintenance.
5. Polarity is important. Black must be connected to black and red connected to red.
6. Not designed for use as temporary lighting.


Step B

Prior to installing the housing in ceiling. Connect power to fixture through wiring access plate by removing two screws that fasten the plate to the housing. Replace wiring access plate.

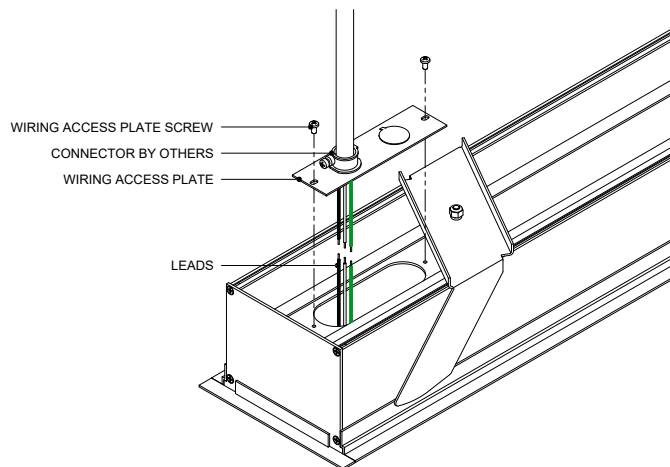


Step A

Refer to cutsheets for ceiling cutout dimensions based upon overall fixture length. Cut rectangular ceiling cut-out. Ceiling should be painted prior to installing fixture to prevent paint on overlapping flange.

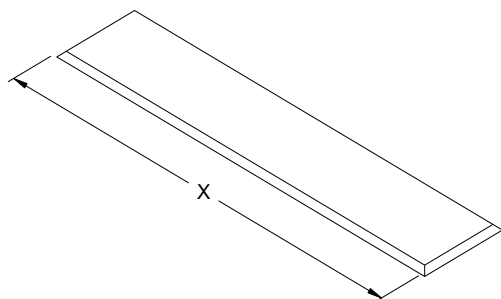

Step C

Lift housing into cut-out until flange is in contact with ceiling and flush all around.

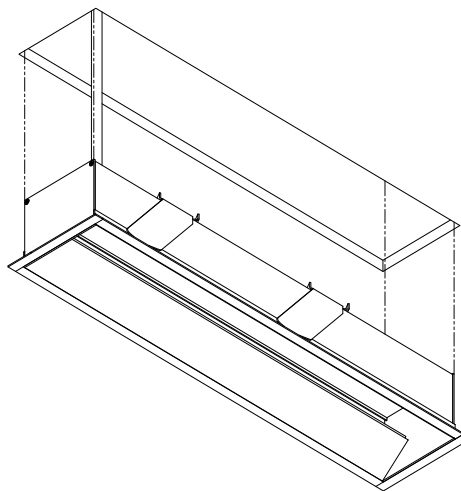

**** LED'S SHOULD BE PROTECTED FROM DUST AND DEBRIS DURING INSTALLATION AND MAINTENANCE**


[Click here to read full Care and Maintenance](#)

Installation Instructions Mural 5" Linear - Continuous Wall Wash

for MU5-RM-F-AF


Step D

Turn mounting bracket adjustment screw until there is significant resistance. The mounting bracket should engage the ceiling. Repeat this for each mounting bracket.

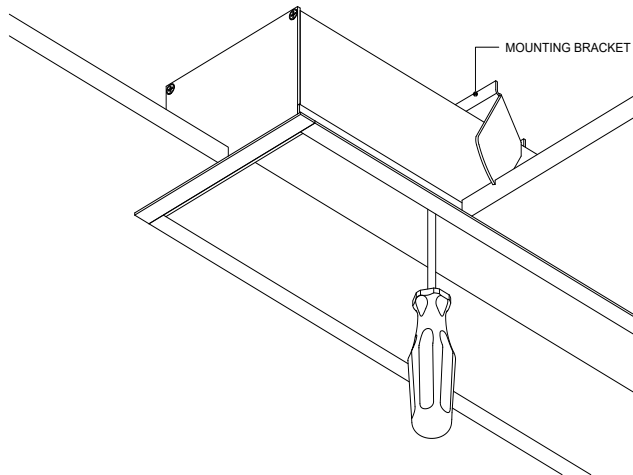

Step F

Install lens into aperture. Test with power.

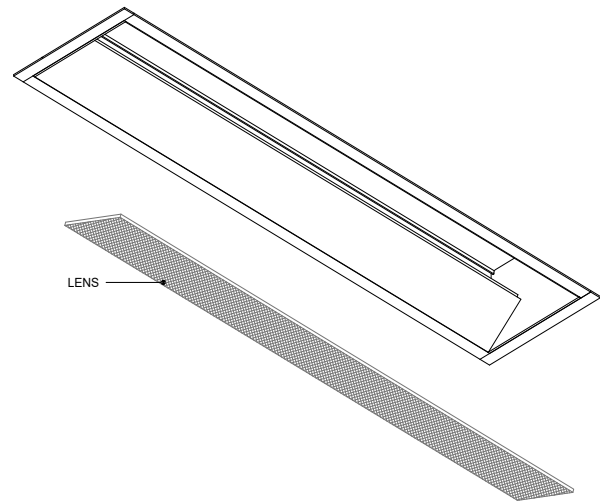

Step E

Lift subsequent sections in place, using joiner pins to connect housings to each other. This may be pushed or tapped using a rubber mallet until the two extruded sides meet and are flush. Turn mounting brackets to engage ceiling as in step D.

