



Cautions and Warnings

- This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
- Power must be OFF when connecting the fixture. "hot plugging" the light engine and driver will damage the LED source.
- The light engine is low voltage and is factory wired to the driver DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER.
- **4.** LEDs should be protected from dust and debris during during installation and maintenance.
- Polarity is important. Black must be connected to black and red connected to red.
- 6. Not designed for use as temporary lighting.

Step A


Mount housing to structure using included hanger bars. Mount housing so that face of throat behind lip is coplanar with the face of ceiling.

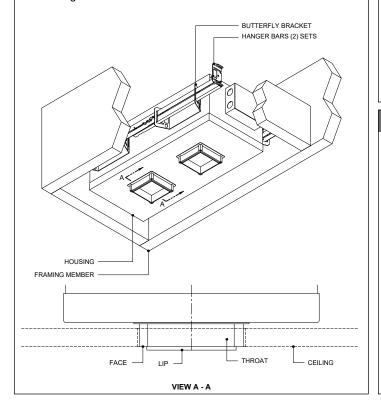

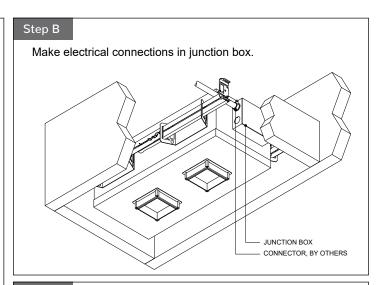


Step C

Cut (2) 3 - 3/4" [95 mm] sq. holes in ceiling, 8" O.C. as shown below.

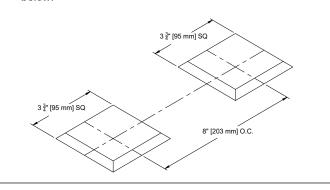

Step D

Install ceiling ensuring the centers of the cut-outs align with centers of housing throats.

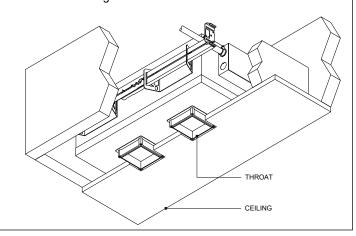

** LED'S SHOULD BE PROTECTED FROM DUST AND DEBRIS DURING INSTALLATION AND MAINTENANCE


Click here to read full Care and Maintenance



for RV3MD-SA-Z-AU


Step E

Install mud flanges with included countersink screws through countersink holes into throat.

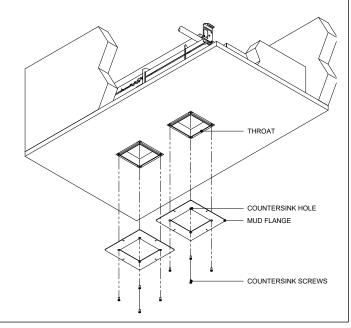


Step G

Attach connector, install lamp head through aperture and affix to top of inside of housing.

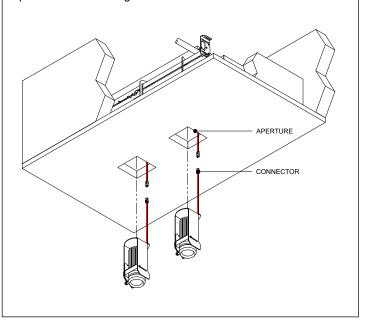

Step F

Finish ceiling, including mudding or plastering mud flange. (Take care not to get paint or joint compound inside opening of mud flange.)

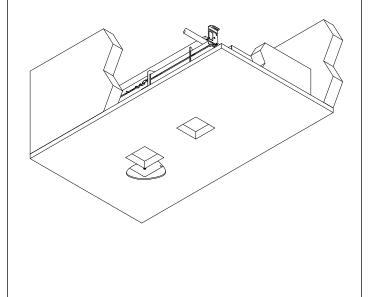

Step H

To use aperture lens, reach inside of aperture and slide lens over aperture. Lens required for wet location operation.

