

Cautions and Warnings


- 1. This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
- 2. Power must be OFF when connecting the fixture. "hot plugging" the light engine and driver will damage the LED
- 3. The light engine is low voltage and is factory wired to the driver DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER.
- 4. LEDs should be protected from dust and debris during during installation and maintenance.
- 5. Polarity is important. Black must be connected to black and red connected to red.
- 6. Not designed for use as temporary lighting.

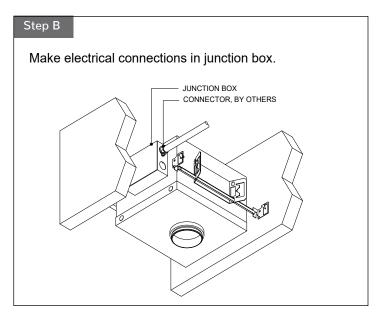

Step A


Mount housing to structure using included hanger bars. Mount housing so that face of lip on throat is 1/8" [3 mm] below the face of the unfinished ceiling.

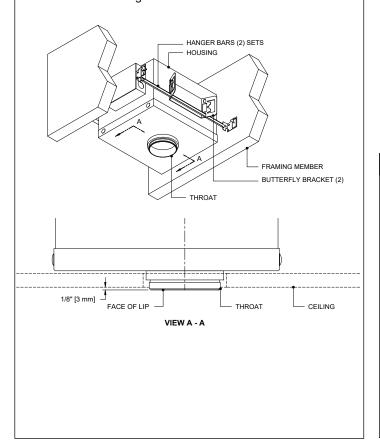

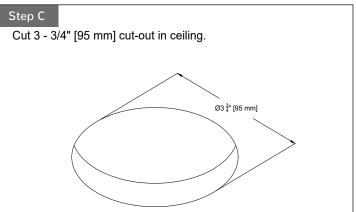

Step D

Install ceiling ensuring the center of the cut-out aligns with center of housing throat.

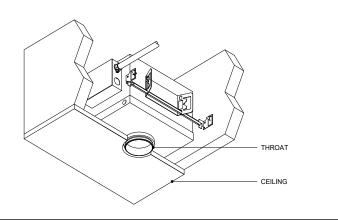


** LED'S SHOULD BE PROTECTED FROM DUST AND DEBRIS DURING INSTALLATION AND MAINTENANCE Click here to read full Care and Maintenance

for RV3D-RA-Z-AU


Step E

Install mud flange by threading mud flange onto throat.

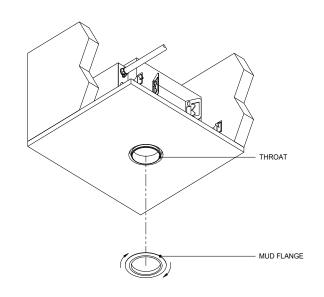


Step G

Attach connector, install lamp head through aperture and affix to top of inside of housing.

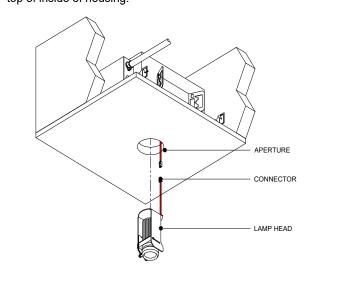

Step F

Finish ceiling, including mudding or plastering mud flange. (Take care not to get paint or joint compound inside opening of mud flange.)

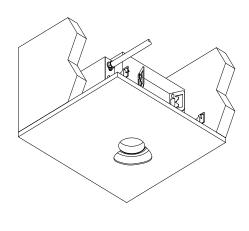

Step H

To use aperture lens, reach inside of aperture and slide lens over aperture. Lens required for wet location operation.

