

Instruction Sheet for 1018 Short Snoot Surface Mount / Lutron Junction Mounting Driver Box Installation



Step 1- 2 screws to anchor J-Box Ceiling Plate to ceiling




Step 2- Attach Lutron Junction Mounting Driver Box to ceiling plate with #8-32 counter sink screws (Screws supplied by SLI). Driver must be installed before installing Lutron driver box to ceiling.



Step 3- Connect wiring before mounting fixture to Lutron Junction Mounting Driver Box.



Step 4- Align (4) housing pins on fixture to Lutron Driver Box (4) keyway slots. Push housing into Driver Box while twisting clockwise. (See step 5 for linking mechanism)

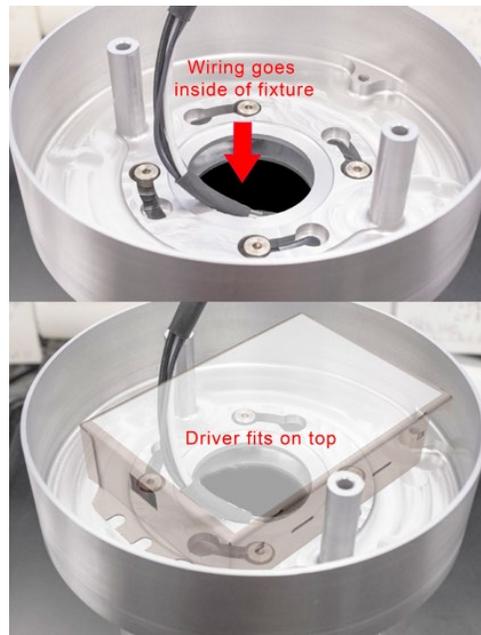

Step 5- closeup of gold pins and keyway slots. Make sure housing pins have locked into slots. Wiring fits in fixture housing below driver.



Step 6- Finish installation