



STEP 1: LOOSEN THE SET SCREW ON THE SIDE OF THE PROJECTOR BODY

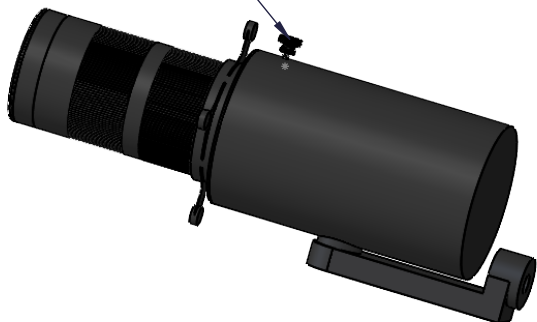


STEP 2: UNSCREW THE FRONT OF THE FRAMING PROJECTOR BODY FROM THE BACK

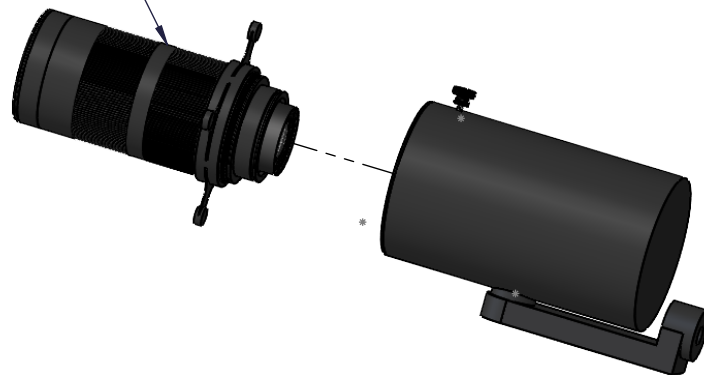

STEP 3: UNSCREW THE OPTIC FROM THE FRONT HALF OF THE BODY




STEP 4: TAKE THE INCLUDED GOBO LENS HOLDER AND UNSCREW THE INNER RING FROM THE OUTER RING, IN ORDER TO PLACE THE GOBO LENS BETWEEN THE TWO AS SHOWN BELOW. REASSEMBLE THE INNER AND OUTER RING WITH THE GOBO INBETWEEN

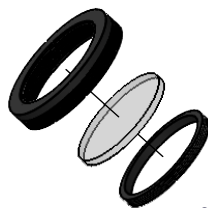


SCALE: 1:2

STEP 5: SCREW THE FULL GOBO ASSEMBLY INTO THE OPTIC UNTIL BOTTOMED

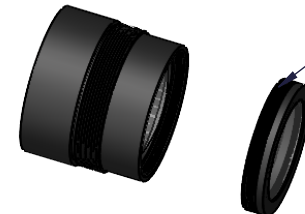

STEP 6: REASSEMBLE FRAMING PROJECTOR BY
FIRST- SCREWING THE OPTIC INTO THE FRONT OF THE PROJECTOR BODY
SECOND- SCREWING THE FRONT INTO THE BACK
FINALLY RETIGHTENING THE SET SCREW

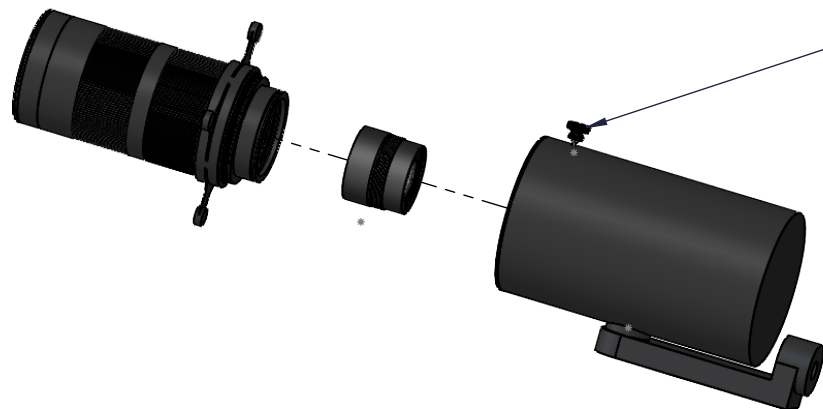

specialty
lighting industries

1306 DORIS AVENUE
OCEAN, NJ 07712 USA

TEL 800.462.7812
TEL 732.517.0800
FAX 732.517.0971

<https://www.specialty-lighting.com/>

GOBO LENSE
INSTALLATION
INSTRUCTIONS FOR
30W FRAMING
PROJECTOR

SCALE: 1:4

SHEET 1 OF 2