Installation Instructions
Core 3” Round Flangeless Trim - Plaster Housing
for *CR3D-RA, CR3D-RF, & CR3WW-RF*

Cautions and Warnings

1. This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power must be OFF when connecting the fixture. "hot plugging" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER.
4. LEDs should be protected from dust and debris during during installation and maintenance.
5. Not to be used for temporary lighting.

Step A

Install hanger bars through slots on sides or ends of housing

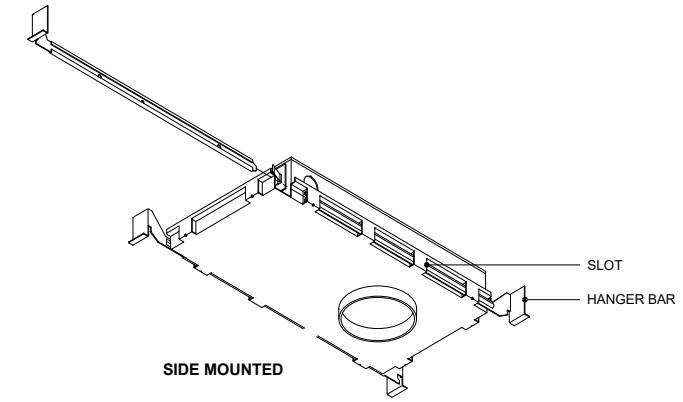

SIDE MOUNTED

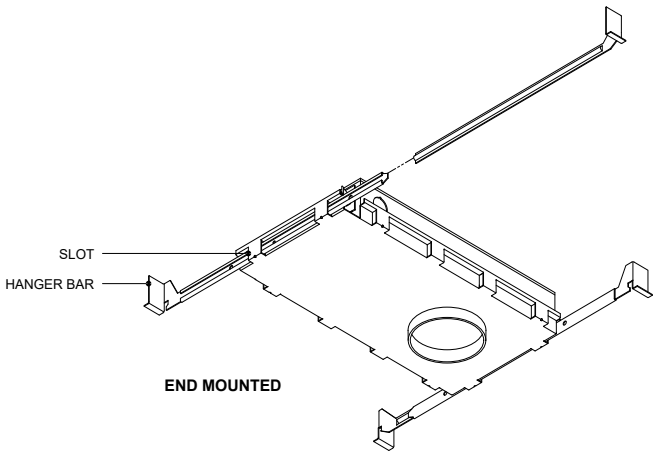

END MOUNTED

Step B

Mount housing to structure using included hanger bars. Mount housing so housing face is coplanar with the bottom of the framing member, top side of ceiling.

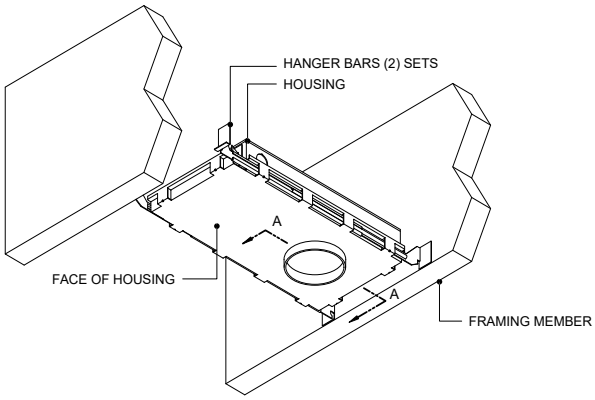

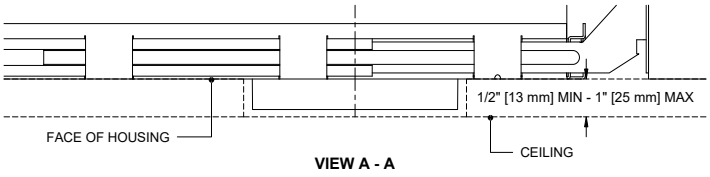

VIEW A - A

Step C

Make electrical connections through access cover on side of housing. Replace cover after completing connections.

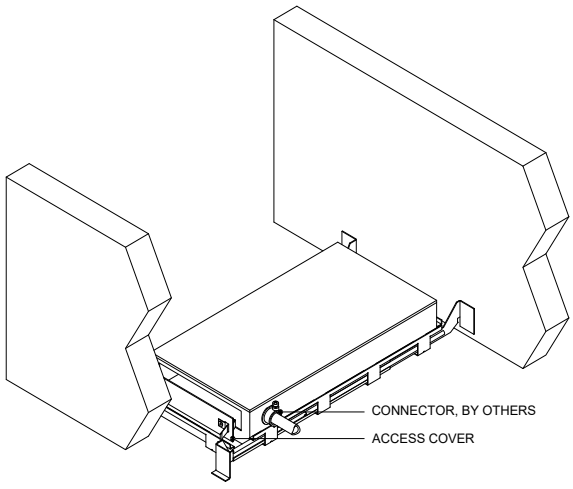

*** LED'S SHOULD BE PROTECTED FROM DUST AND DEBRIS DURING INSTALLATION AND MAINTENANCE*

Click here to read full Care and Maintenance

Specialty Lighting Industries, Inc
1306 Doris Ave., Ocean, NJ 07712, USA
Tel. 732.517.0800 | Fax 732.517.0971

2025© Specialty Lighting Industries, Inc.
NOTE: These specifications are subject to change without notice
Rev 1A - September 2026

Step D

Cut Ø3 - 5/8" [92 mm] cut-out in ceiling.

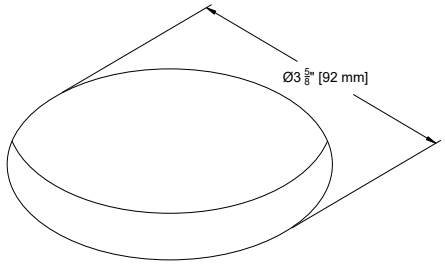

Step E

Install ceiling assuring cut-out aligns with center of housing throat.

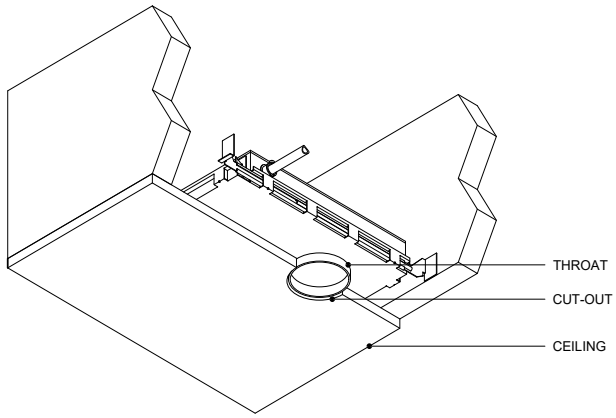

Step F

Install mud flange by threading flange clockwise into throat until flange is flush against ceiling. Install 3/4" long drywall screws through coutnersunk holes in plaster flange.

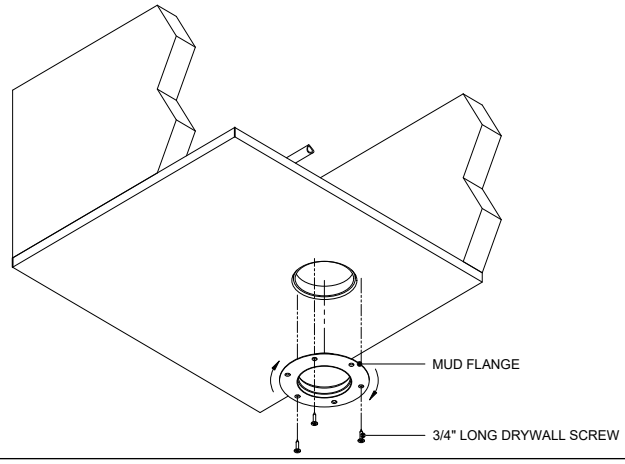

Step G

Finish ceiling, including mudding or plastering mud flange. (Take care not to get paint or joint compound inside opening of mud flange.)

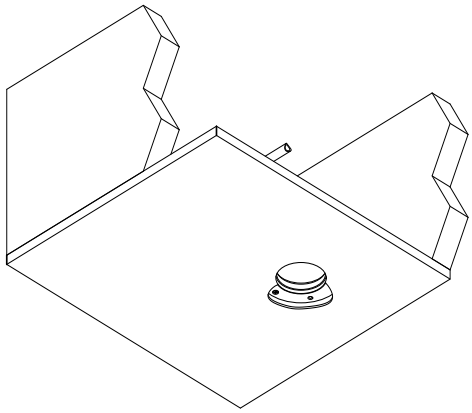

Step H

Push trim into collar until ball plungers engage the retainer within the collar.

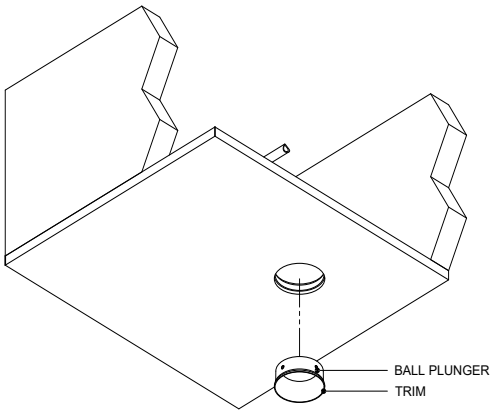

Step I

Remove trim by pulling downward on trim until ball plungers dis-engage from retainers. If trim is lensed, push lens up to grab trim and remove.

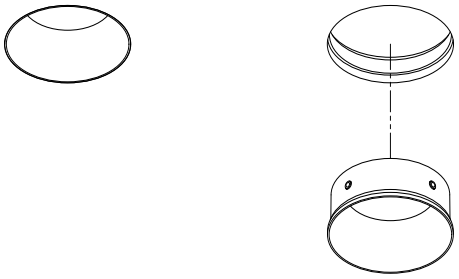

Specialty Lighting Industries, Inc
1306 Doris Ave., Ocean, NJ 07712, USA
Tel. 732.517.0800 | Fax 732.517.0971

2025© Specialty Lighting Industries, Inc.
NOTE: These specifications are subject to change without notice
Rev 1A - September 2026