



NOTE: REMOVE ANY SHIPPING BRACES BEFORE STARTING INSTALLATION

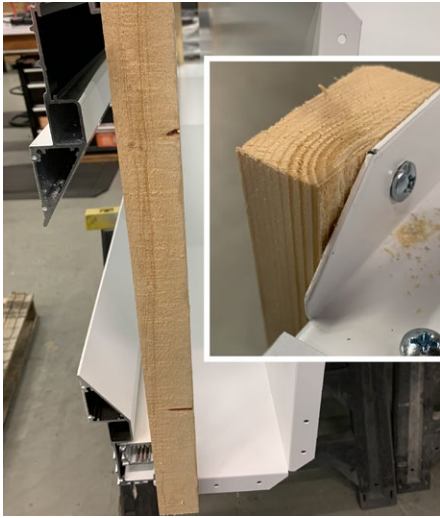

Step 1- Remove screws holding the shipping braces to the housing

1/4-20 threaded rod to structure. supplied by others

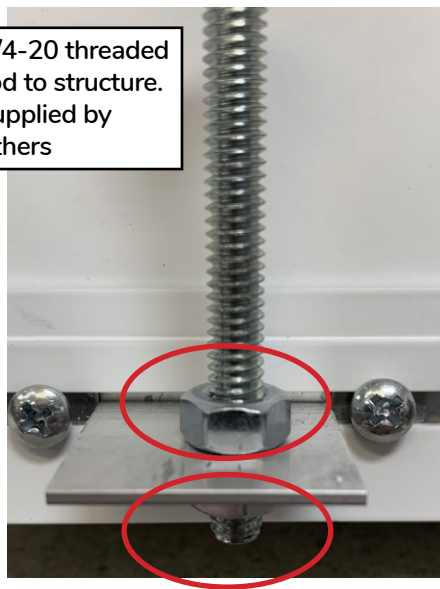


Step 2- Lift and position housing. Add threaded rods from T-brackets to ceiling structure for support.

Step 2A- Make sure 1 nut is below the T-bracket and one nut is above the T-bracket (as circled in red)



Step 3- Install next section by sliding into couplers of previous section. Make sure connector plate and pins all slide into corresponding parts on next section.

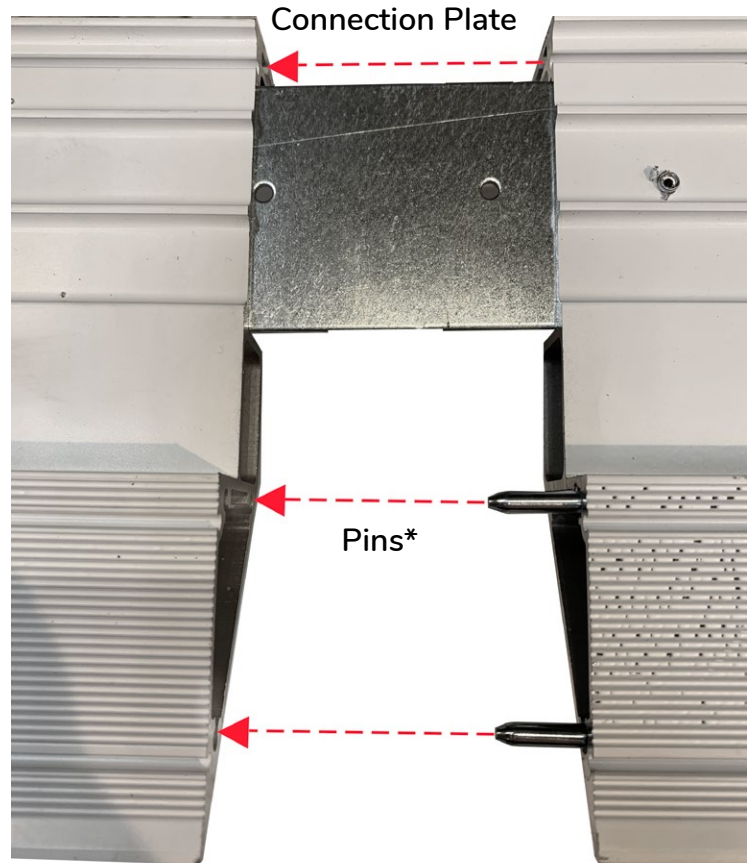

* There are 6 Pins for each section connecting 2 sections together (not all shown here).

MOSAIC GENERAL INSTALL

Note: This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product hazards involved. It is recommended these products be installed by a qualified electrician.


FRONT VIEW - CONNECTION



BACK VIEW



CORNER GUSSET
(connects 2 sections)

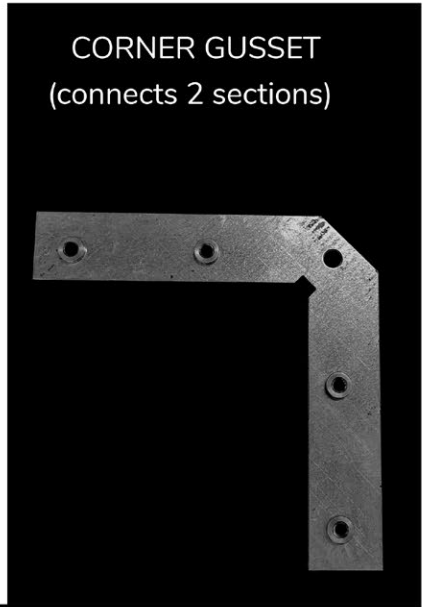

Step 4- While assembling, use provided corner gussets and hardware to secure housing to each other, as well as threaded rods to the ceiling structure. Use level to ensure fixture is level and plumb.




MAKE SURE TO REMOVE SHIPPING BRACE (WOOD)

MOSAIC GENERAL INSTALL


Note: This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product hazards involved. It is recommended these products be installed by a qualified electrician.

1/4-20 thread rod to structure. supplied by others

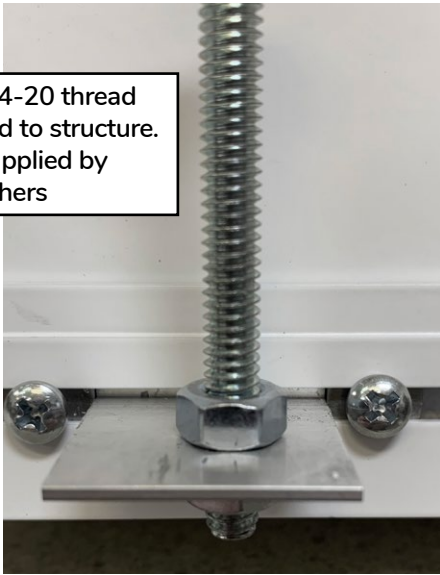


Step 5 - Repeat same procedure from Step 2- Step 4 for any additional sections.

Step 6 - Run electrical to J-Box/Feeds. Verify minimum 6"-8" of excess wire is present in J-Box for connections.

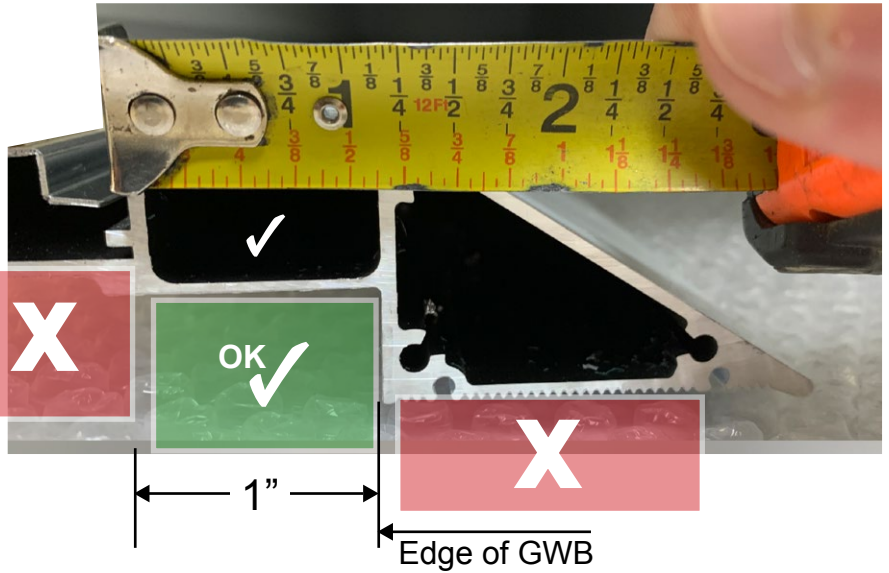

Step 7- GWB goes around plaster frame and housing, use factory edge against plaster frame. With sheetrock screws, fasten frame to GWB within 1 inch around plaster frame. Drill only in ✓ area (highlighted in green) . Do not drill in area above X (highlighted in red).

WARNING: DRILLING OR ADDING SCREWS TO WRONG LOCATION WILL CAUSE SERIOUS DAMAGE TO LIGHTING COMPONENTS.
MAX LENGTH 1-1/4" CONSTRUCTION SCREWS

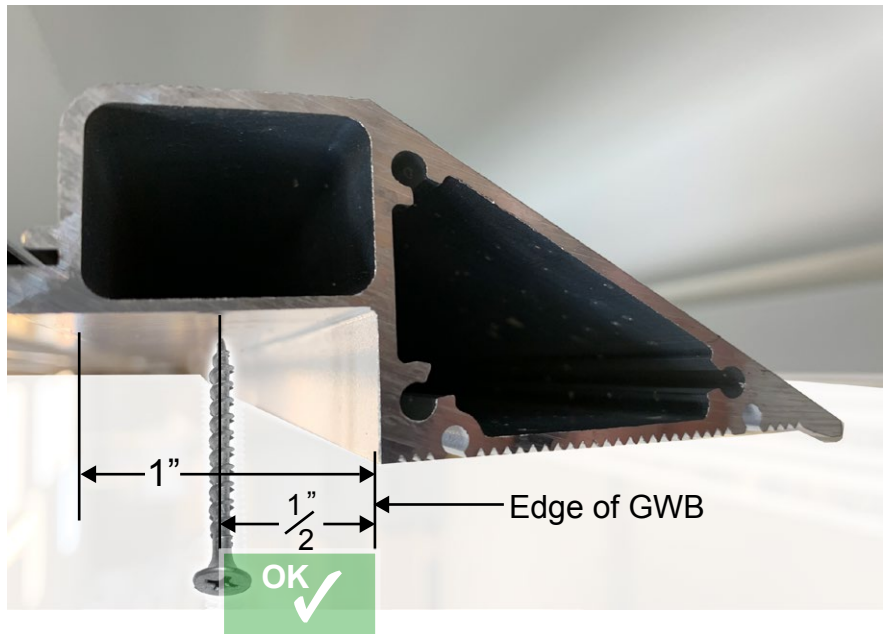

Step 7a- Plaster over flange and allow to dry before painting.

WARNING: WHEN SPACKLING DO NOT ALLOW SPACKLE OR SPACKLE DUST TO INTRUDE INSIDE OF THE FIXTURE

MOSAIC GENERAL INSTALL

Note: This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product hazards involved. It is recommended these products be installed by a qualified electrician.